


WINDSOR



MAINTENANCE

86372520

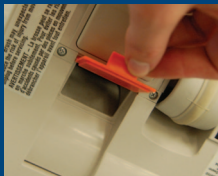

01) Unclog the machine.



02) To remove a clog from the hose press the buttons to remove the hose and clean with a broom handle.



03) Replace vacuum bag when clog or bag full light comes on.



04) Replace the motor filter quarterly.



05) Replace exhaust filter quarterly or every 90 bags. From left to right: Sensor S and Sensor XP.



06) If check brush light comes on clean the brush.



07) Wrap cord for storage, being careful not to pull too hard on the strain relief of the cord.

WINDSOR



OPERATION

86372520



01) Inspect brushes for wear using a credit card and replace if necessary. The card should touch the bristles when you run the card over the plate.



02) Check that all three prongs are on the main body of the cord. IF ONE OF THE PRONGS IS MISSING, NOTIFY YOUR SUPERVISOR.



03) Plug the cord into an outlet.



04) Attach the optional accessory tool if necessary.



05) Turn the machine on.



06) **SENSOR S ONLY:** adjust the brush height. Starting at the highest setting, adjust the height setting by setting until you hear the brush hit the carpet.



07) Move the orange switch to the right for body to floor cleaning and to the left to cross thresholds.

WINDSOR

SENSOR S AND SENSOR XP



OPERATION

86372520



08) Unplug the cord from the wall.



09) Hold the strain relief in an upright position so that the strain relief will not be damaged when the cord is wrapped.



10) Wrap the cord for storage starting from the base. Wrapping the cord properly will help prevent cord failure.



Bold Innovation. Expert Results.



Bold Innovation. Expert Results.



Bold Innovation. Expert Results.



Bold Innovation. Expert Results.